

# 911 SIGNAL<sup>®</sup>


## H1200

Hideaway Lights


ITEM: 060701/060703






### > MOUNT

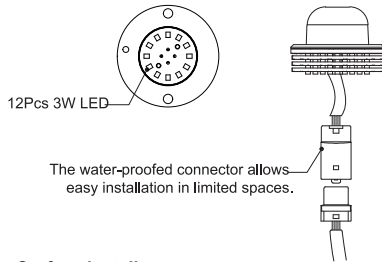

### Surface install

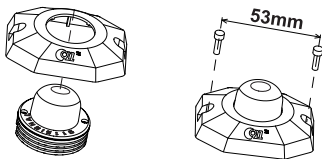


### Internal install

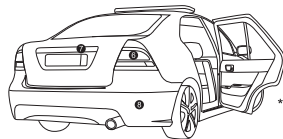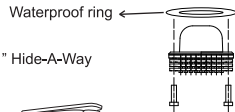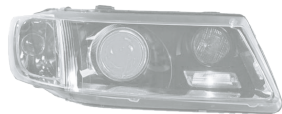

\*Anywhere means on any surface  
\*Even inside the headlights of any vehicle

## > WIRING

### Dual Color

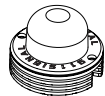

Blue — Color1 "1"

Red — Color1 "2"

Black — GND


Yellow — Synchronization, flash pattern selection and reset

- Connect YELLOW wires of all heads together for synchronization
- To change flash patterns, apply +VDC for less than 1 second and release
- Flash patterns will be reset when YELLOW wires are connected to RED wire for more than 5 seconds

White — Alternation

With the power off, connect the wire from one lighthouse to +VDC and leave the other unconnected. Their patterns will alternate when the lighthouses are activated.

### Single Color

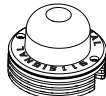

Red — DC 10-33V

Black — GND

Yellow — Synchronization, flash pattern selection and reset

White — Alternation

## TECHNICAL SPECIFICATIONS

<b>Model</b>	H1200	H1200T
<b>Item</b>	060701	060703
<b>Color</b>	Single	Dual
<b>Voltage</b>	10-33VDC	
<b>Max Power</b>	18W	13W
<b>LED</b>	12pcs 3W	
<b>Flash Patterns</b>	19	12
<b>Mount</b>	Surface Mount, Inside of headlight	
<b>Operating Temperature</b>	-30 to 70°C	

## > Flash Patterns

- |                         |                       |
|-------------------------|-----------------------|
| 1. Steady 2 (Default)   | 8. Quad (All)         |
| 2. Steady 4 (All)       | 9. Quint (All)        |
| 3. Random (All)         | 10. Ultra (All)       |
| 4. ECE R65 single (All) | 11. Single-Quad (All) |
| 5. ECE R65 double (All) | 12. Single-H/L (All)  |
| 6. Single (All)         |                       |
| 7. Double (All)         |                       |

- |                          |                           |
|--------------------------|---------------------------|
| 1. Random (Default)      | 11. Single (All)          |
| 2. Single (Split)        | 12. Double (All)          |
| 3. Double (Split)        | 13. Quad (All)            |
| 4. Quad (Split)          | 14. Quint (All)           |
| 5. Quint (Split)         | 15. Ultra (All)           |
| 6. Ultra (Split)         | 16. Single - Quad (All)   |
| 7. Single - Quad (Split) | 17. Single - H/L (All)    |
| 8. Single - H/L (Split)  | 18. Steady 2 (California) |
| 9. Ece R65 Single (All)  | 19. Steady 4 (All)        |
| 10. Ece R65 Double (All) |                           |

### 911 Signal Technology Inc.

Add: Room 701-702, Hengwei Building, No. 258, Tiangao Lane, Shouan Subdistrict, Yinzhou Area, Ningbo City, Zhejiang, China.

Tel: +86 574 89017911 +86 400 6757911

Fax: +86 574 82822560

Email: sales@911signal.com

Website: www.911signal.com