911 SIGNAL



911 Signal Technology Inc.

Add:Room 701-702,Hengwei Building,No.258, Tiangao Lane, Shounan Subdistrict, Yinzhou Area, Ningbo City, Zhejiang,China.

Tel: +86 574 89017911 +86 400 6757911

Fax: +86 574 82822560 Email: sales@911signal.com Website: www.911signal.com


VisorMate


One-piece design, combination of warning and work lights

TECHNICAL SPECIFICATIONS


Item	051901	052001		
Color Single		Dual		
Voltage	10-33VDC			
Max Power	12W(warning lights) / 6W(backlight)			
LED	8pcs 3W	16pcs 3W		
LENS	TIR			
Flash Patterns	19	21		
Mount	Surface Mount			
Operating Temperature	-30 to 70°C			

MOUNT

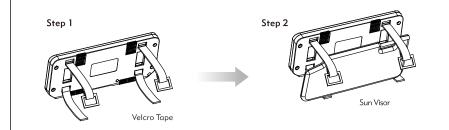

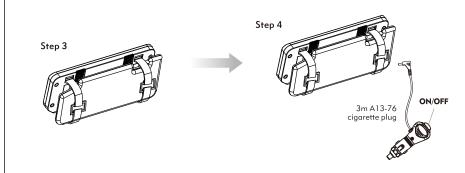

INTEGRATED BUTTONS

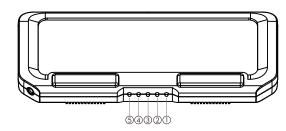

Backlight Intensity

Hold the button until you have the wanted intensity. Press the button to turn off the backlight.

Color 1

On/Off for warning color 1

Color 2

On/Off for warning color 2

Flash Pattern Press the button to change flash patterns. Hold the button for 5 seconds to go back to the default pattern.

Previous Setting

Hold the button for 5 seconds for memorizing the setting. Then press the button whenever you need the memorized setting.

FLASH PATTERNS

Single Color

1	Random (default)	11	Single (all)
2 Single (split)		12	Double (all)
3	Double (split)	13	Quad (all)
4	Quad (split)	14	Quint (all)
5	Quint (split)	15	Ultra (all)
6	Ultra (split)	16	Single-quad (all)
7	Single-quad (split)	17	Single-H/L (all)
8	Single-H/L (split)	18	Steady2 (all)
9	ECE R65 single (all)	19	Steady 4 (all)
10	ECE R65 double (all)		

Dual Color

1	Random (default)	12	ECE R65 double (all)
2	ECE R65 single (split)	13	Single (all)
3	ECE R65 double (split)	14	Double (all)
4	Single (split)	15	Quad (all)
5	Double (split)	16	Quint (all)
6	Quad (split)	17	Ultra (all)
7	Quint (split)	18	Single-quad (all)
8	Ultra (split)	19	Single-H/L (all)
9	Single-quad (split)	20	Steady2 (all)
10	Single-H/L (split)	21	Steady 4 (all)
11	ECE R65 single (all)		