

## LED Visor Lights C40

- Meets and exceeds ECE R65, ECE R10, SAE standards
- Two-piece interior lightbar perfect for slick-top, highway and undercover applications
- Universal visor brackets mount
- Easy to install
- Colorful hardwire control

## SHARK TOOTH




### Shroud Extender (optional)


Sep1. Attach rubber strip onto the shroud extender



Sep4. Secure extender with screws

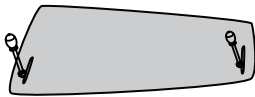


Sep2. Place extender on the

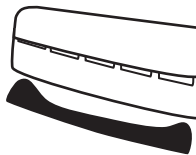

Sep5. Cut & attach wedges to the insides of shroud to minimize flash back




Sep3. Align extender against screw holes to the desired position"

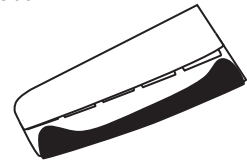


### MOUNTING


① Mount brackets by screws

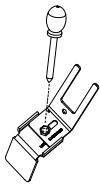


② Secure brackets onto bottom of the Stealth Visor

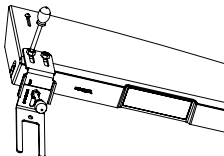


③ Adjust the big bracket according to the fit against the windshield

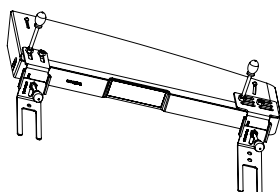

④ Loosen screw of visor, Slide mounting bracket firmly into the slot

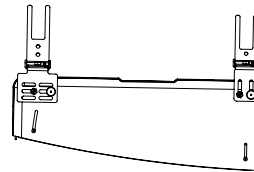

⑤ Adjust Undercover visor to firmly press against windshield, then tighten screws.

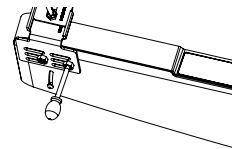

#### Operation with Hardwire Setup

- Red: Positive VDC
- Black: Ground
- Brown: ON/OFF
- Orange: To +VDC for Left Arrow
- Blue: To +VDC for Right Arrow
- Orange + Blue: To +VDC for Center Out
- Green: To +VDC for 50% Power
- Yellow: To +VDC for Flash Pattern Selection
- White: To +VDC for Takedown